


# OIL APPLICATION MANUAL FOR WOODEN SURFACES

## 1. PREPARE THE WOODEN SURFACE FOR SANDING.

Humidity cannot exceed 14%.

We suggest:

- If required, then use a wood filler to fill any wood imperfections.
- For staircase surfaces use P120-P180 grit sandpaper.
- For work surfaces use P150-P260 grit sandpaper.
- Remove any dust particles. Use a vacuum cleaner or use an air compressor to blow away any dust from sanding.

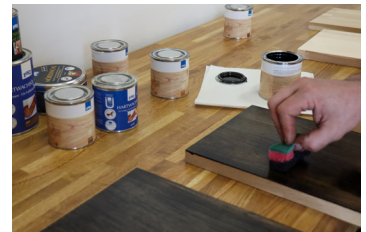

## 2. OIL APPLICATION PROCESS.

Shake the oil tin well before opening, to ensure oil is mixed evenly!

Two coats are required for oil application.

### First coat application:

- First coat is applied with a roller or paint brush, evenly coating the surface. After 15-20 minutes the remaining oil is polished into the surface with a cotton rag or pad until it is practically dry. Check the surface with your fingers, to ensure it is not sticky!

Polish only in the direction of the wood grain! Manufacturer suggests to apply the second coat after a minimum of 8 hours!

### Second coat application:

- Complete the oil application process exactly like the first coat application. Dry the surface for 8 hours.

If the surface is meant for humid treatment, then do not do this sooner than 8 days, since the wax hardening process is still underway.

**IMPORTANT!** Keep rags, cloths in an enclosed tray or dipped in water. It is possible for the rags to self combust if oxygen is present.